


# BOCA WALK-IN TUBS

## AIR SYSTEM

### CLASSIC LED KEYPAD Functions

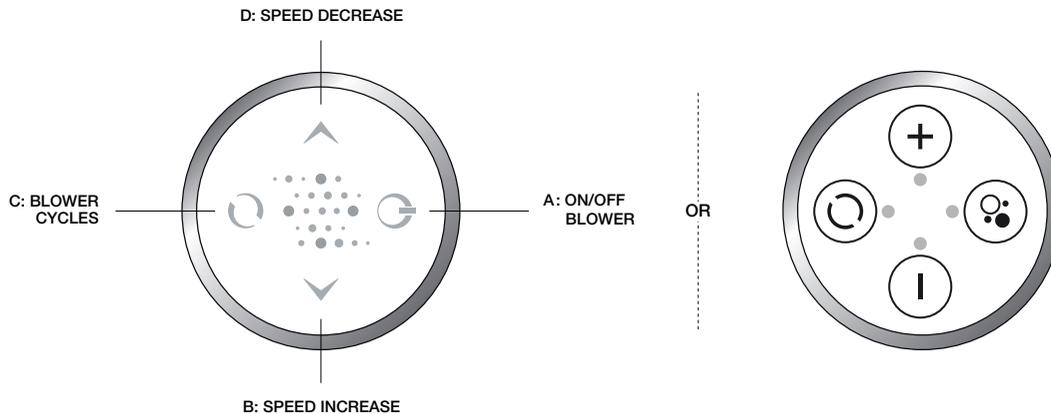


CLASSIC LED KEYPAD FUNCTIONS	LED	ADVANCED PROGRAMMING
<b>A: ON/OFF BLOWER</b> 1 <sup>st</sup> Press: The blower starts 2 <sup>nd</sup> Press: The blower stops	ON OFF	<b>INTEGRATED 20 MINUTE AUTOMATIC TIMER</b> Integrated 20 minute automatic timer on the system.
<b>B: SPEED DECREASE</b> Press and hold to decrease the blower speed, release pressure at the desired speed.	ON (WHEN PRESSED)	<b>DRYING CYCLE</b> A 1 minute automatic drying cycle will start 20 minutes after the blower is turned off. The blower touch LED blinks while waiting for the purge cycle.
<b>C: BLOWER CYCLES</b> 1 <sup>st</sup> Press: Wave Cycle - Speed goes gradually from maximum to minimum. 2 <sup>nd</sup> Press: Pulse Cycle - Speed goes rapidly from maximum to minimum. 3 <sup>rd</sup> Press: Returns to maximum speed.	ON BLINK OFF	<b>24H PROGRAMMABLE DRYING CYCLE</b> The system must be stopped prior to activation or deactivation. <b>Activation:</b> Determine at which time you wish the purge to activate. that precise time, press and hold the second button on the keypad for 5 seconds, all LEDs will flash twice to confirm activation. The purge cycle will now start at the programmed time every 24 hrs. In the event of a power failure, the program will be automatically deactivated.
<b>D: SPEED INCREASE</b> Press and hold to increase the blower speed, release pressure at the desired speed.	ON (WHEN PRESSED)	<b>Deactivation:</b> Press and hold the second button on the keypad for 5 seconds, all LEDs will flash once to confirm deactivation.

# BOCA WALK-IN TUBS

## SYSTÈMES À AIR

### CLAVIER CLASSIQUE À LED

#### Fonctions

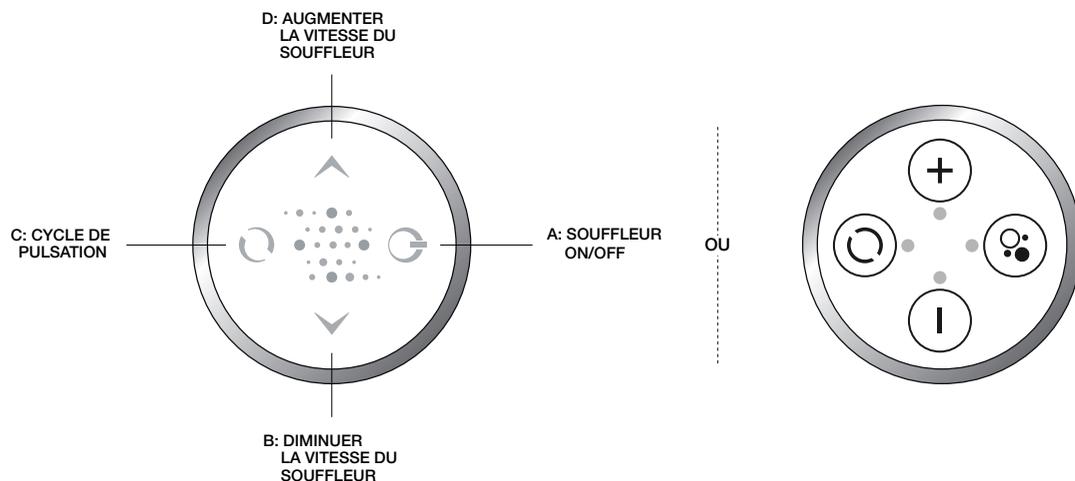

FONCTIONS CLAVIER CLASSIQUE À LED	LED	PROGRAMMATION AVANCÉE
<b>A: SOUFFLEUR ON/OFF</b> 1 <sup>ère</sup> Pression: Le souffleur démarre. 2 <sup>e</sup> Pression: Le souffleur arrête.	ON OFF	<b>MINUTERIE DE 20 MINUTES INTÉGRÉE.</b> Minuterie automatique de 20 minutes intégrée sur le système complet.
<b>B: DIMINUER LA VITESSE DU SOUFFLEUR</b> Appuyer et maintenir pour diminuer la vitesse du souffleur. Relâcher la pression à la vitesse désirée.	ON (LORSQUE MAINTENU)	<b>CYCLE DE SÉCHAGE STANDARD</b> Un cycle de séchage de 1 minute démarre automatique 20 minutes après l'arrêt complet du souffleur. Le LED de la touche du souffleur clignote en attente du cycle de séchage.
<b>C: CYCLE DE PULSATION</b> 1 <sup>ère</sup> Pression: Vague - La vitesse varie graduellement du maximum au minimum. 2 <sup>e</sup> Pression: Pulsation - La vitesse va directement du minimum au maximum de façon alternative. 3 <sup>e</sup> Pression: Retourne à vitesse maximum.	ON CLIGNOTE OFF	<b>CYCLE DE SÉCHAGE AUX 24H PROGRAMMABLE</b> Le système doit être arrêté pour l'activation ou la désactivation. <b>Activation:</b> Déterminer l'heure à laquelle vous désirez que le cycle s'effectue. À cette heure précise: appuyer sur la 2 <sup>e</sup> touche du clavier durant 5 secondes, tous les LED's clignoteront 2 fois pour indiquer que le cycle est activé. À partir de ce moment, le cycle s'effectuera automatiquement toutes les 24 heures. En cas de panne électrique, le cycle sera désactivé automatiquement.
<b>D: AUGMENTER LA VITESSE DU SOUFFLEUR</b> Appuyer et maintenir pour augmenter la vitesse du souffleur. Relâcher la pression à la vitesse désirée.	ON (LORSQUE MAINTENU)	<b>Désactivation:</b> Appuyer sur la 2 <sup>e</sup> touche du clavier durant 5 secondes, les LED's clignoteront 1 fois pour indiquer que le cycle de séchage 24 heures est désactivé.