


# BOCA WALK-IN TUBS

## CHROMATHERAPY SYSTEM

### CLASSIC LED KEYPAD Functions

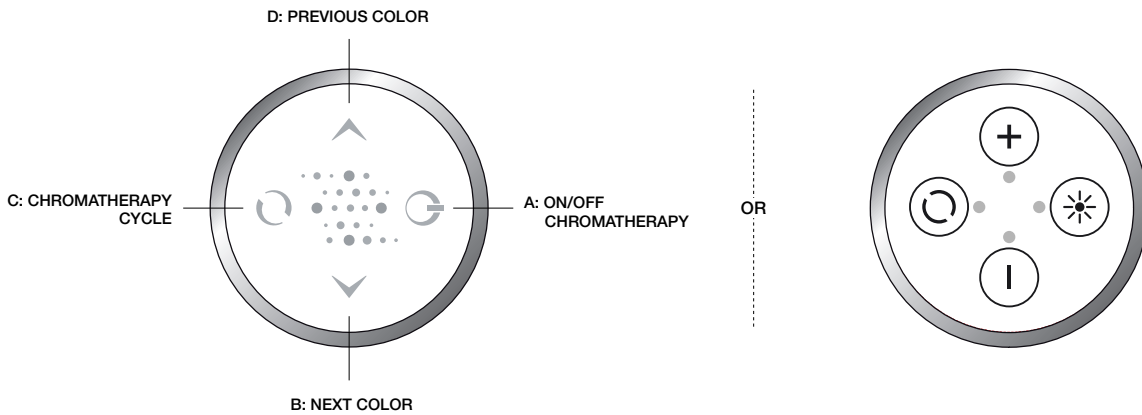

### CLASSIC LED KEYPAD FUNCTIONS

### LED

### ADVANCED PROGRAMMING

#### A: ON/OFF CHROMATHERAPY

1<sup>st</sup> Press: Starts the chromatherapy in white.  
*White is only available when the system starts.*  
2<sup>nd</sup> Press: Chromatherapy stops.

ON  
OFF

#### INTEGRATED 20 MINUTE AUTOMATIC TIMER

Integrated 20 minute automatic timer on the system.

#### B: NEXT COLOR/ SPEED DECREASE

Press: Press to proceed to the next color.  
On Rainbow cycle: decreases the speed.  
Hold to quickly change between colors.  
Release at the desired color.

ON  
(WHEN PRESSED)

#### C: CHROMATHERAPY CYCLE

1<sup>st</sup> Press: Rainbow cycle starts.  
2<sup>nd</sup> Press: Stops on current color.  
3<sup>rd</sup> Press: Turquoise.  
4<sup>th</sup> Press: Back to rainbow mode.

ON  
(WHEN PRESSED)

#### D: PREVIOUS COLOR / SPEED INCREASE


Press: Press to return to the previous color.  
On Rainbow cycle: increases the speed.  
Hold to quickly change between colors.  
Release at the desired color.

ON  
(WHEN PRESSED)

# BOCA WALK-IN TUBS

## SYSTÈME DE CHROMATHÉRAPIE

### CLAVIER CLASSIQUE À LED Fonctions

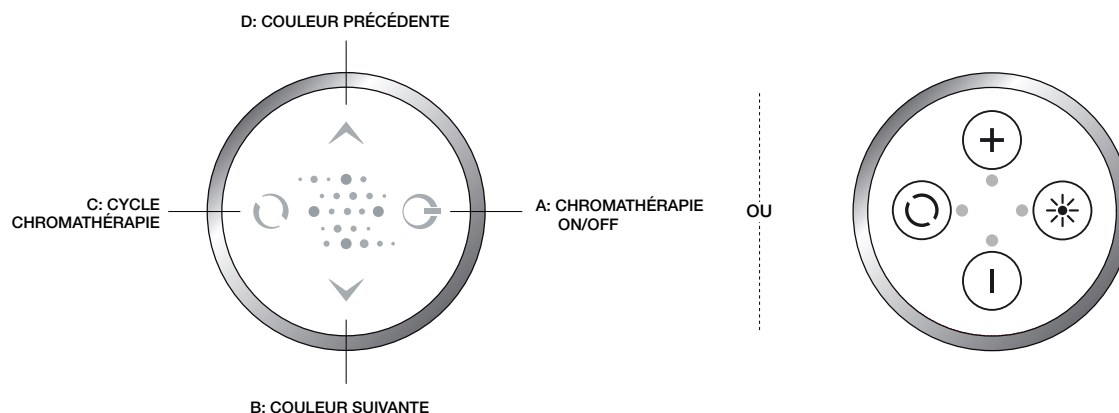

#### FONCTIONS CLAVIER CLASSIQUE À LED

#### LED

#### PROGRAMMATION AVANCÉE

##### A: CHROMATHÉRAPIE ON/OFF

1<sup>ère</sup> Pression: Les lumières allument en blanc.  
Le blanc s'affiche seulement lors de la mise sous tension.  
2<sup>e</sup> Pression: Les lumières s'éteignent.

ON  
OFF

##### MINUTERIE DE 20 MINUTES INTÉGRÉE.

Minuterie automatique de 20 minutes intégrée sur le système complet.

##### B: COULEUR SUIVANTE / DIMINUER LA VITESSE

Appuyer pour passer à la couleur suivante.  
En mode / Arc-en-ciel: Diminuer la vitesse du cycle.  
En mode / Cycle Pause: Changer à la couleur précédente ou suivante.

ON  
(LORSQUE  
MAINTENU)

##### C: CYCLE CHROMATHÉRAPIE

1<sup>ère</sup> Pression: Activer le mode Arc-en-ciel.  
2<sup>e</sup> Pression: Arrête sur la couleur affichée.  
3<sup>e</sup> Pression: Retourner en mode Arc-en-ciel.

ON  
(LORSQUE  
MAINTENU)

##### D: COULEUR PRÉCÉDENTE / AUGMENTER LA VITESSE

Appuyer pour retourner à la couleur précédente.  
En mode / Arc-en-ciel: Accélérer la vitesse du cycle.  
En mode / Cycle Pause: Changer à la couleur précédente ou suivante.

ON  
(LORSQUE  
MAINTENU)